 




CMi Series

Install Instructions For:
Pre-construction bracket w/ J-box

1.435.647.9555 | 800.647.TUBE | www.soundtube.com

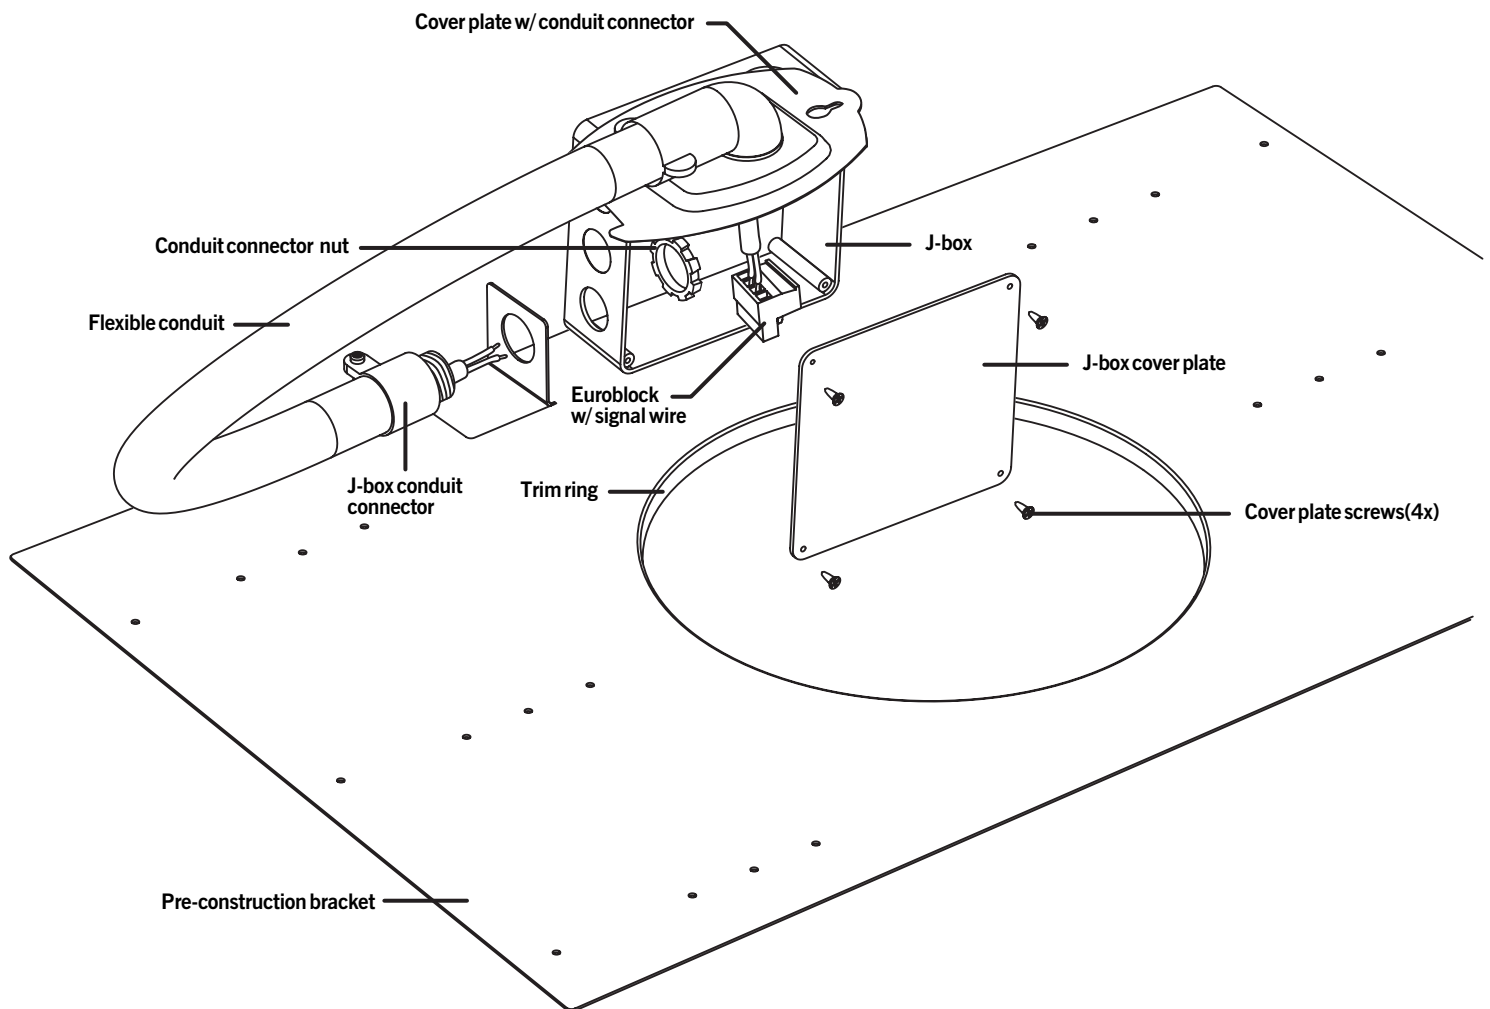

Box contents

- 1 Pre-construction bracket
- 1 Euroblock connector w/ signal wire
- 1 J-box w/ cover plate
- 1 Cover plate w/ conduit connector and conduit

 
©2004 SoundTube Entertainment, Inc. All rights reserved. rev 12.06.04

Warning


SoundTube speakers must be installed by a professional audio installer/contractor. For safety and for optimum audio performance, installer must follow all directions issued by SoundTube Entertainment.

Warning


Do not spec or install speaker near support beam, ventilation duct or other structure that may interfere with speaker function or dispersion.

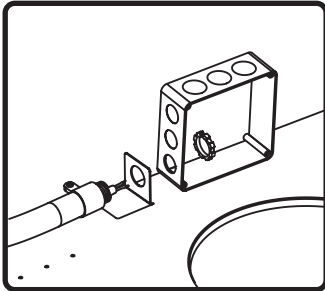

 
1. Remove locknut from conduit connector. Remove knockout from J-box. Insert strain relief thru tab and J-box. Replace lock nut on conduit connector and tighten locknut.

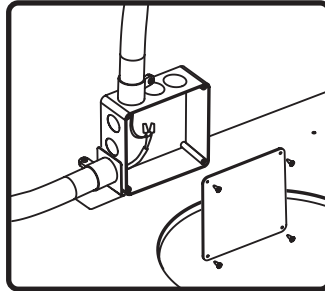


2. Attach signal wire to source and replace J-box cover plate.

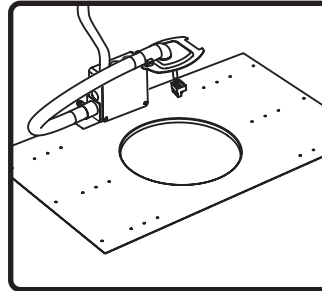 

 
3. Nail or screw bracket assembly to joists. Secure cover plate and conduit to keep clear of hole in bracket.

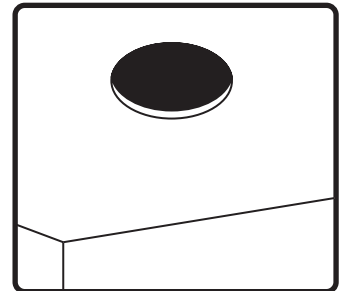

 
4. Complete finish work. Use roto-zip to cut out hole in sheet rock.

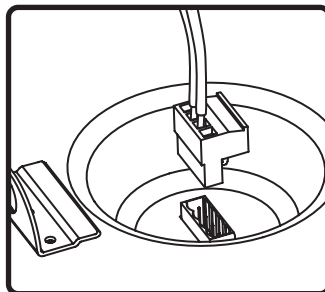

 
5. Insert the Euroblock plug into the Euroblock jack on rear panel of speaker and Attach cover plate and conduit.

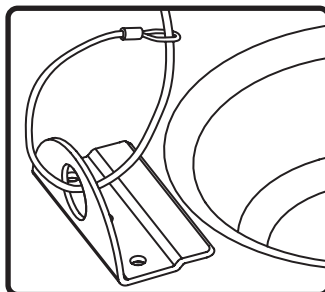

 6. If required, attach the seismic restraint system to the sheet-metal tab on the rear panel of the speaker (safety cable not included).

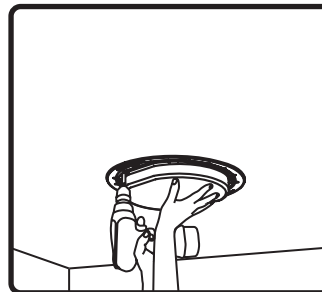


 7. Insert speaker into mounting hole with installation aid in place. Screw down both bolts on the baffle face to actuate the mounting wings. Firmly secure both bolts – **do not over-tighten.**

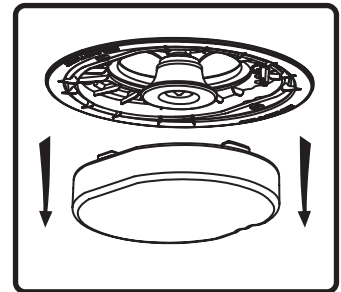


8. **If not painting** the ceiling, remove & discard the paint mask.

 
9. **If painting** the ceiling after the speaker is installed, leave the paint mask in place until paint is dry.

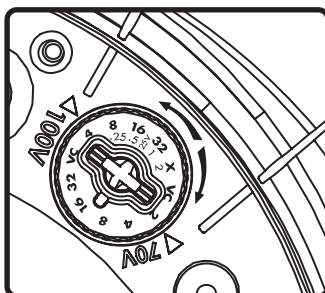

 10. Select the tap position by adjusting rotary switch to desired high impedance value or voice coil bypass mode. Switch is preset to maximum tap setting in 70.7 V mode (33 W or 65 W).

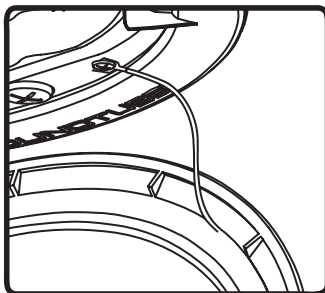

11. Attach grille & bezel seismic restraint to baffle with provided screw.

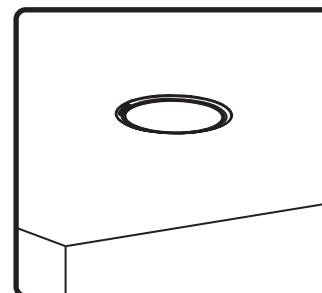 

12. Attach grille – position the grille over the baffle and allow magnets to attract grille into place. Be sure grille is properly centered over baffle.